



Valve for Oil Flow
For 5 - 10 - 17 litres
since they have external metallic screw thread

"Easy and Clean"


Easy to use
Quick flow
No leaks
Insures the content from dust and germs
absolves you from grim surfaces

approved for food contact, HACCP and ISO certified

PRICE

ΚΡΥΣΤΑΛ

Manufactured by
KRYSTAL KATHES MOLDING S.A.
Ave. N. 71601 Industrial Area Iraklion
Tel.: +30 2810 333008
Fax: +30 2810 381714

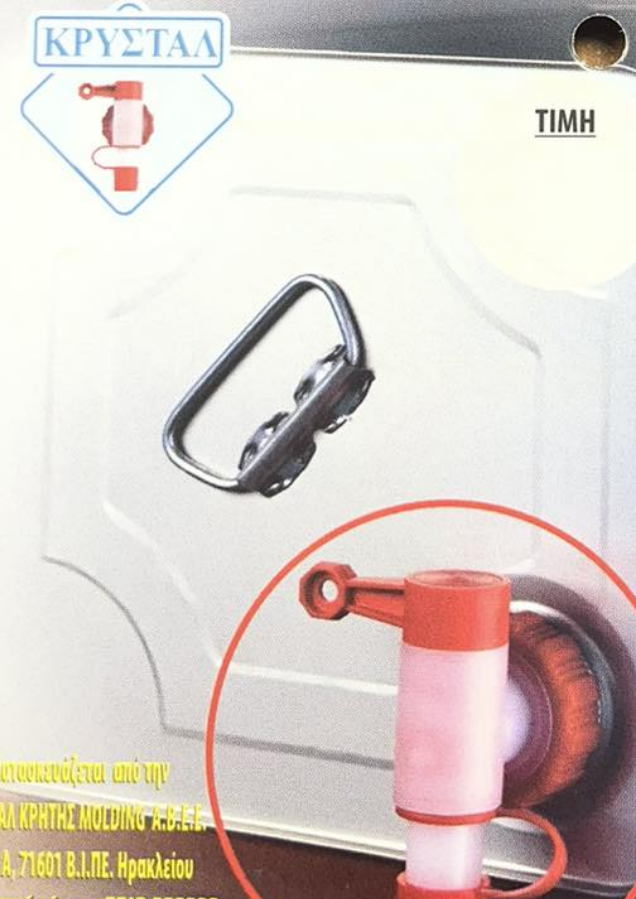

ΚΡΥΣΤΑΛ

Βαλβίδα Ροής Λαδιού
5 - 10 - 17 λίτρων

εφόσον διαθέτουν εξωτερικό μεταλλικό πάσο

"Εύκολα και καθαρά"

Εύχρηστο
Γρήγορη Ροή
Χωρίς διαρροές
Ασφαλίζει το περιεχόμενο από σκόνη και μικρόβια
Σας απαλλάσσει από το λέρωμα των επιφανειών

κατάλληλο για τρόφιμα
πιστοποίηση ποιότητας
ISO, HACCP

ΠΑΤΕΝΤΑ

ΚΑΤΑΣΚΕΥΑΖΕΤΑΙ ΑΠΟ ΤΗΝ
ΚΡΥΣΤΑΛ ΚΡΗΤΗΣ ΜΟΛΔΙΝΓ Α.Β.Ε.Ε.
Οδός Α. 71601 Β.Ι.Π.Ε. Ηρακλείου
Τηλεφωνικό κέντρο: 2810 333008
Fax: 2810 381714

Εφάρμοζει και σε μεταλλικά δοχεία 5 + 10 λίτρων εφόσον διαθέτουν εξωτερικό μεταλλικό νήσο.

Για λόγους υγιεινής, τονοθετείστε την τάπα κάτω από το στόμιο για να κλείσει την βρύση και να ελαττώσετε τον διακόντην δεξιά.



Τονοθετείστε κάτω από το στόμιο του ένα πινουκάκι ή μικρό δοχείο ηδίου της επιλογής σας, προκειμένου να γίνει η μεταγγίση της ποσότητας του ηδίου που χρειάζεστε.

Βεβαιωθείτε ότι ο διακόντης είναι δεξιά για να είναι το βανάκι κλειστό. (νάγκο)

Τυπώστε το δοχείο σας ηδία σε μια οποιαδήποτε επιθυνη επιφάνεια.

Βιδώστε το βρύσακι επάνω στο νήσο του 17 λίτρων δοχείου σας μέχρι να τερματήσει, προκειμένου να μην υπάρχει διαρροή.

Βεβαιωθείτε ότι ο διακόντης είναι δεξιά για να είναι το βανάκι κλειστό.

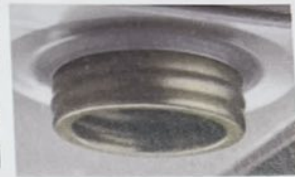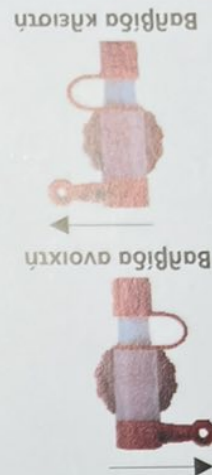

Οδηγίες Χρήσης

Installation instructions

Screw the valve on the screw thread of your container until it adapts perfectly, in order that there are no leaks.

Make sure that the switch is on the right in order that the valve is closed.

Turn your container in Side Face on any planar surface (counter top)

Under it's outfall, place a bottle or small container of your choice for oil, in order that the transfusion of the oil is done in any desired quantity.

Turn the switch of the valve to the left when the container is filled up, close the valve and re-turn the switch to the right position.

For hygienic reasons, place the cap under the outfall in order that it is closed.



Valve open



Valve Closed



Also adapts to metallic containers of 5 + 10 litres since they have external metallic screw thread.